




Tricefy Uplink & Downlink

Last Modified on 2024-02-07 10:58

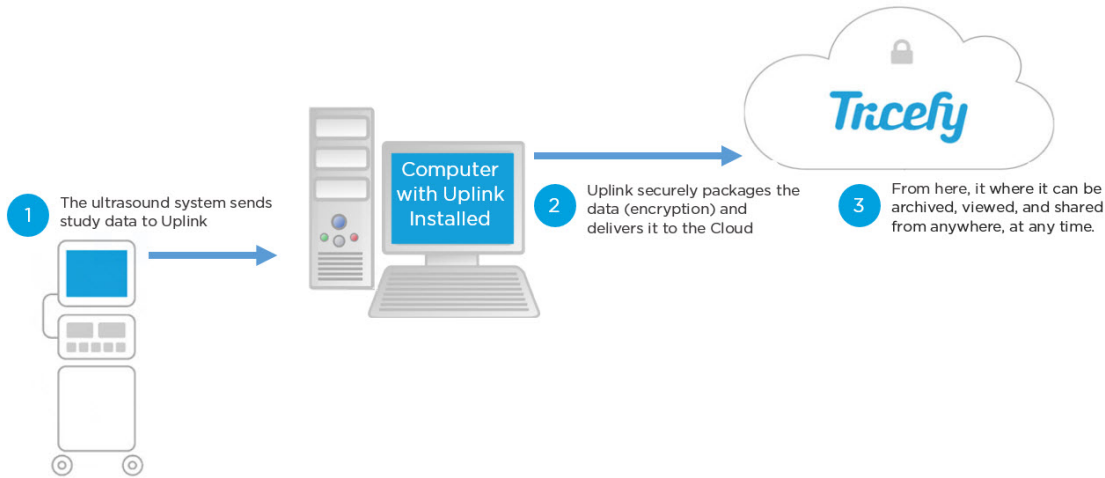

Downloading Tricefy Uplink or Downlink



Windows Installer (current version 4.3.3.493)

- https://downloads.tricefy.com/tricefy_uplink/Uplink4Setup.exe



Mac OS Installer

- https://downloads.tricefy.com/tricefy_uplink/uplink4.pkg

Installing Tricefy Uplink



[Instructions for installing Tricefy Uplink 4](#) (installer also includes Downlink service)

Note: GE ViewPoint integrations and local anonymization will be included in future upgrades (continue using the [Legacy Uplink](#) for these services)



If you are using GE Voluson, you may have [Tricefy Inside](#). This feature is a pre-installed uplink software that can be activated with your Tricefy account

Learn More about Tricefy Uplink:



[Tricefy Uplink Requirements](#)



[Making sure your IP address is Static](#)



[Instructions for a New Computer](#)



[Instructions for using the Tricefy Downlink service to download from Tricefy](#)



[Learn more about anonymization](#)
