




## Tricefy Uplink & Downlink

Last Modified on 2026-06-12 15:10

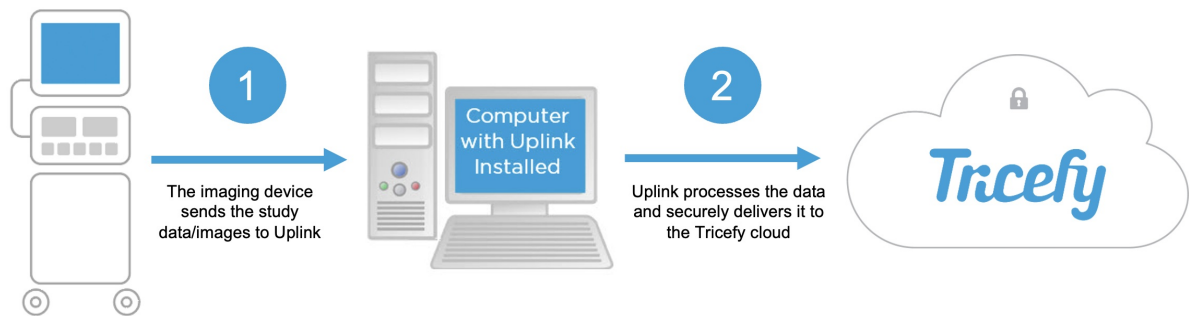

## Downloading Tricefy Uplink or Downlink



Windows Installer - version 4.5.2

- [https://downloads.tricefy.com/tricefy\\_uplink/Uplink4Setup.exe](https://downloads.tricefy.com/tricefy_uplink/Uplink4Setup.exe)



Mac OS Installer

- [https://downloads.tricefy.com/tricefy\\_uplink/uplink4.pkg](https://downloads.tricefy.com/tricefy_uplink/uplink4.pkg)

! → Follow the steps linked below in order to allow the Uplink installer to run on Mac OS : <https://www.tricefy.help/help/uplink-macos>

## Installing Tricefy Uplink



Instructions for installing Tricefy Uplink 4 (installer also includes Downlink service)

Note: For GE ViewPoint integrations the [Legacy Uplink](#) must be used.



If you are using GE Voluson, you may have [Tricefy Inside](#). This feature is a pre-installed uplink software that can be activated with your Tricefy account

## Learn More about Tricefy Uplink:



[Tricefy Uplink Requirements](#)



[Making sure your IP address is Static](#)



[Instructions for a New Computer](#)



 [Instructions for using the Tricefy Downlink service to download from Tricefy](#)

 [Learn more about anonymization](#)

---