
Tricefy Uplink & Downlink

Last Modified on 2026-11-03 09:57

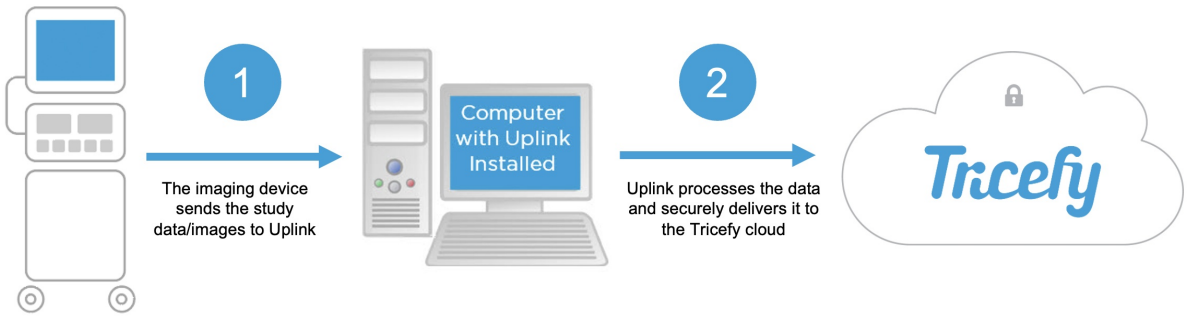

Downloading Tricefy Uplink or Downlink

Windows Installer - version 4.6.0

- https://downloads.tricefy.com/tricefy_uplink/Uplink4Setup.exe

Mac OS Installer

- https://downloads.tricefy.com/tricefy_uplink/uplink4.pkg

! → *Follow the steps linked below in order to allow the Uplink installer to run on Mac OS* : https://www.tricefy.help/help/uplink-macos

Installing Tricefy Uplink

Instructions for installing Tricefy Uplink 4 (installer also includes Downlink service)

Note: For GE ViewPoint integrations the Legacy Uplink must be used.

If you are using GE Voluson, you may have Tricefy Inside. This feature is a pre-installed uplink software that can be activated with your Tricefy account

Learn More about Tricefy Uplink:

Tricefy Uplink Requirements

Making sure your IP address is Static

Instructions for a New Computer

Tricefy

- Instructions for using the Tricefy Downlink service to download from Tricefy
- Learn more about anonymization